

## LITHIUM BATTERY RECOVERY - BATTERY TEMP BELOW -4°F

(BATTERY STOPS RECEIVING A CHARGE WHEN BATTERY TEMP REACHES 32°F, STOPS DISCHARGING AT -4°F)

If you are not able to get power to your furnace with shore power, your batteries have either discharged too low, or are outside their operational temperature range (-4°F to 132°F).

